

# VOLKSWAGEN

Group Motorsport



Volkswagen  
Motorsport



---

## Kit Instalation Guide for Scrutineering logger

Application to:

- VAG cars with Sequential gear box
- VAG cars with DSG gear box

# Kit Instalation Guide for Scrutineering logger

## **BRACKET FOR TCR SCRUTINEERING 2018 EVO5 KIT**

VW AG reference: 5F6129101B

**Net price: 246.68€**

**VW GROUP MOTORSPORT offers to customers the “Bracket kit for TCR Scrutineering EVO5”, compulsory for the TCR International and in many of the TCR National championships.**

### ***How to order:***

**- To adquire Bracket kit for TCR Scrutineering EVO5, Through online catalogue to:**  
**<http://vwgroupmotorsport-onlineplatform.com/>**

**-To adquire the Scrtutineering Data logger Evo 5 kit please contact to Memotec GmbH  
to : <http://www.me-mo-tec.de/>**

# Kit Instalation Guide for Scrutineering logger



The VW AG reference includes :

Num.	Name	Units	Photo
1	THREADED ADAPTER	1	
2	RACORD 90º M10X1 TO TUBE Ø6X4 (LEGRIS)	2	
3	FLUOPOLYMER LEGRIS TUBE Ø6x4 L=25m	2.5m	
4	FITTING	1	
5	CLIC CLAMP 21,5 - 23 MM	2	
6	ANGLE BRACKET	1	
7	Ø8 RUBBER CAP	1	
8	RIVET NUT M6	1	
9	TORX SCREW M6X20	1	
10	LOCK NUT M4 DIN985 8.8	4	
11	STRAIGHT ADAPTER (M/F) M10X1	1	
12	ALUMINIUM WASHER 10 X 14 X 1,5	1	
13	LOCK NUT M5 DIN985	2	

# Kit Instalation Guide for Scrutineering logger

How to install:

1. Fix the scrutineering plate on the codriver side. Fix the bracket (A) plate under the speed unit and the scrutineering logger base (B) (not included in the kit).
2. Fix the boost pressure (C) sensor on the base. Connect the Teflon pipe from the boost sensor to the inlet manifold. Pass the pipe through the engine bay wall. Following the fuel pipe is an option, but you can find other ways. Also you can use the base to fix the AIM camera and other optional.

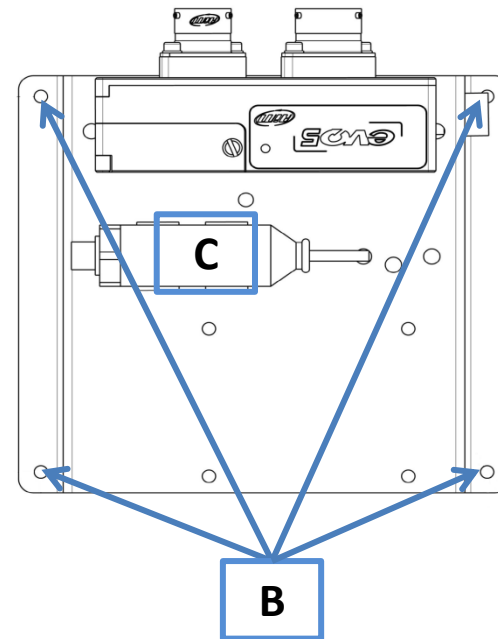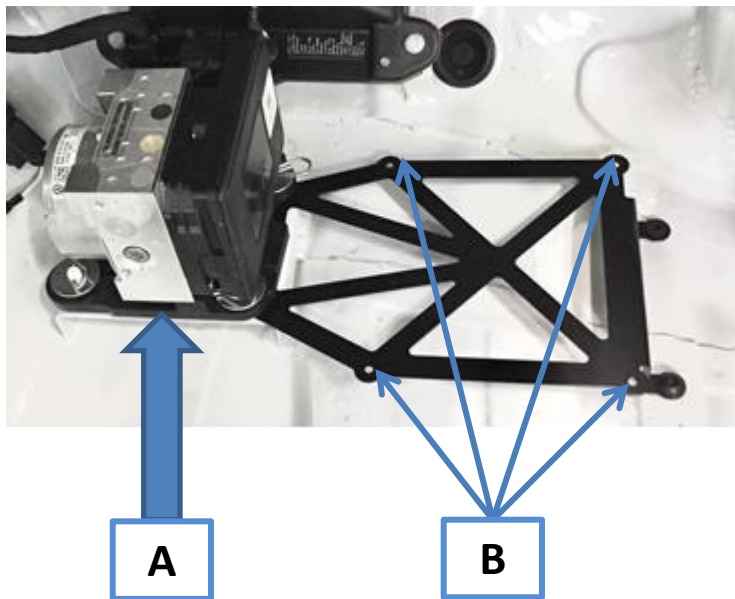

# Kit Instalation Guide for Scrutineering logger

How to install :

3. On the plastic inlet manifold there is a blind plug ready. Drill a 1,5mm hole inside. To do it, it is not necessary to dismount the manifold, wet the drill head with a drop of grease and the small shavings will fix there; Fix the adaptor with the clamps supplied.

